

Highlighting and selecting

To highlight an item, touch the screen lightly. To select an item or to place the cursor, click (press) the screen.

To select text to cut or copy, simultaneously touch the screen before and after the text that you want to cut or copy. To move the cursor one character at a time, touch the cursor frame and slide your finger.

Selecting text to cut or copy



Scrolling

To scroll down, slide your finger up. To scroll up, slide your finger down.

Scrolling up or down



Moving between items

To move to the next item, slide your finger to the left quickly.

To move to the previous item, slide your finger to the right quickly.

Moving between items




Zooming and panning

To zoom in to a picture or web page, click the screen. To zoom out from a picture or web page, press the _____ key.

To pan a picture, slide your finger in any direction.



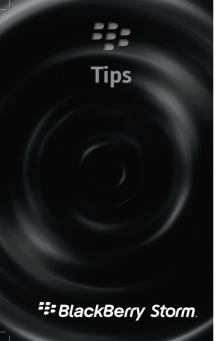

Songs and videos

To pause or resume playing a song or video, press the **Mute** key.

To increase or decrease the volume, press the **Volume Up** key or the **Volume Down** key.

To play the next or previous song in a category, hold the **Volume Up** key or the **Volume Down** key.



Camera

To zoom in to or out from a subject, press the **Volume Up** key or the **Volume Down** key.

To lock focus on a subject before you take a picture, press the **Right Convenience** key halfway.

To take a picture, press the **Right Convenience** key.



Menus and keys

To type a letter, click (press) the letter key. To hide the keyboard, slide your finger down.



To open a menu in any application to access options and available actions, press the

To close a menu or move back a screen, press the key.

To lock the screen, press the **Lock** key.

To return to the Home screen, press the

Find more navigation tips

For more navigation tips, see the setup wizard on your BlackBerry® Storm™ 9500 smartphone or BlackBerry® Storm™ 9530 smartphone.

MAT-29341-001 Rev, 002 | PRINTSPEC-048 | @2010 Research In Motion Limited, Alf rights reserved BlackBerry-RIM® - Research In Motion®, SureType®, SurePress® and related trademarks, names and logos are the property of Research In Motion Limited and are registered and/or used in the U.S. and countries around the world. Google Mail is a trademark of Google Inc. Hotmail and Windows Live are trademarks of Microsoft Corporation. All other trademarks are the property of their respective owners. This documentation is provided as is "and without condition, endorsement, guarantee, representation or warranty, or liability of any kind by Research In Motion Limited and its affiliated companies, all of which are expressly disclaimed to the maximum extent permitted by applicable law in your jurisdiction.